



Sådan kan 2 helikoptere flyve samtidig med hver sin fjernbetjening.

Alt skal være slukket.

Sæt den ene fjernbetjenings kanalvælger på A. Tænd for den. Tænd for helikopteren og vent nogle sekunder. Nu er den bundet til kanal A.

Sæt så den anden fjernbetjenings kanalvælger på B. Tænd for den. Tænd for den anden helikopter og vent nogle sekunder. Nu er den bundet til kanal B.

Change channels to fly simultaneously

To enable this function make sure both remotes and both helicopters are off.

1. Set the first remote's channel switch to the **leftmost position** (it says A, B, and C). Turn the remote on.
2. Turn the helicopter that you would like to bind to the remote on and set the helicopter down on a flat stable surface for about 5 seconds. Try the throttle and the helicopter should respond to this remote.
3. Next, to enable the second helicopter, set the second remote's channel switch to the **rightmost position** (it says A, B, and C, but the origin S107G only supports 2 channels). Turn the remote on.
4. Turn the second helicopter on and set the helicopter down on a flat stable surface for about 5 seconds. Try the throttle and the second helicopter should respond to this remote.